

FRONTLINE

FALL PROTECTION

USER INSTRUCTION MANUAL

Applicable to Suspension Intolerance Strap : ACTR
 Manufacturer : www.frontlinefall.com



Care by Frontline even after a Fall !

Avoid the effects of Suspension Trauma with the use of Frontline Suspension Intolerance Strap.

- ✓ Extremely effective, specially designed to help relieve the negative effects of Suspension Trauma.
- ✓ Compact and Light-weight. Does not hamper the activity of worker while at work.
- ✓ Allow the suspended worker to stand up in his harness to relieve pressure.
- ✓ Easy to attach to the Harness with the help of the textile loop and velcro provided.
- ✓ Easy deployment operation.

INSPECTION :


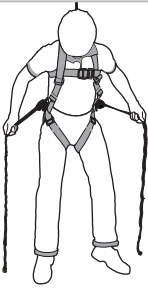




Regular Inspection is recommended prior to using this with harness. It can be used on numerous occasions if it has been inspected prior to use and shows no sign of damage.

LIFE SPAN :

Maximum Life Span for the Suspension Intolerance Strap is 10 years.

CAPACITY / USER WEIGHT : Max user weight - 310lbs.

STEPS TO USE

 <p>Un-zip the pouches fitted on both sides of Harness</p> <h1>1</h1>	 <p>Hold the 2 straps together</p> <h1>2</h1>	 <p>Connect the straps with each other making a loop with the help of easy-to-use buckle</p> <h1>3</h1>
 <p>Put your feet into the loop</p> <h1>4</h1>	 <p>Stand onto the loop, so that the thigh strap are free to move</p> <h1>5</h1>	 <p>Adjust the sit strap towards the front to release pressure and give a seat-posture</p> <h1>6</h1>

MARKING ON PRODUCT:

The suspension intolerance strap is marked with :

- ✓ Identification of the manufacturer
- ✓ Type or product code
- ✓ Month and Year of Manufacture
- ✓ Batch/Lot No
- ✓ Serial No. of Lanyard
- ✓ Material

HOW TO DISPOSE A SUSPENSION INTOLERANCE STRAP:

When the suspension intolerance strap becomes unfit or in case of any wear and tear, dispose it immediately.

Follow the following steps for disposal:

- ✓ Make the three plastic crates namely- Textile, Metal & Plastic for placing the respective components of the suspension intolerance strap.
- ✓ Spread the suspension intolerance strap on a table / flat surface.
- ✓ Inspect the wear & tear present on the suspension intolerance strap.
- ✓ If any wear and tear is observed, dispose the suspension intolerance strap using a sharp scissors; first cut the Textile and dismantle the suspension intolerance strap.
- ✓ Put the Textile, Plastic & Metal components in their respective plastic crates.

MARKING

FRONTLINE
FALL PROTECTION

Suspension Intolerance Strap

Keep these instructions safe at all times. The instructions must be read and understood before using the equipment!

Batch Number : XXX
 Serial Number : XXX
 Date of Manufacture : MM/YYYY
 Model : ACTR
 Material : Polyester

DO NOT REMOVE LABELS

Product must be inspected and recorded every 6 months by a competent person.
Date of First Use: _____

Inspection Log

YEAR	M	O	N	D
20	J	A	S	O
20	F	E	B	R
20	M	A	M	J
20	J	J	A	S
20	O	C	T	O
20	N	O	V	E

ANY ALTERATION, ABUSE OR MISUSE OF THE PRODUCT VOIDS THE WARRANTY.

DISCLAIMER:

This information on the product is based upon technical data that Frontline obtained under laboratory conditions and believes to be reliable. Frontline does not guarantee results and take no liability or obligation in connection with this information. As conditions of end use are beyond our control it is the user's responsibility to determine the hazard levels and the use of proper personal protective equipment. Persons having technical expertise should undertake evaluation under their own specific end-use conditions, at their own discretion and risk. Please ensure that this information is only used to check that the product selected is suitable for the intended use. Any product that is damaged, torn worn or punctured should be discontinued from usage immediately.

EQUIPMENT RECORD				
Product :				
Model & type/Identification		Trade Name	Identification number	
Manufacturer		Address	Tel, fax, email into use	
Year of manufacture		Purchase Date	Date first put into use	
Other relevant information (e.g. document number)				
PERIODIC EXAMINATION AND REPAIR HISTORY				
Date	Reason for entry (periodic examination or repair)	Defects noted, repairs carried out and other relevant information	Name and signature of competent person	Periodic examination next due date

STS-181218-V5